


Item # 00294

## LCD WORLD TIME WEATHER STATION

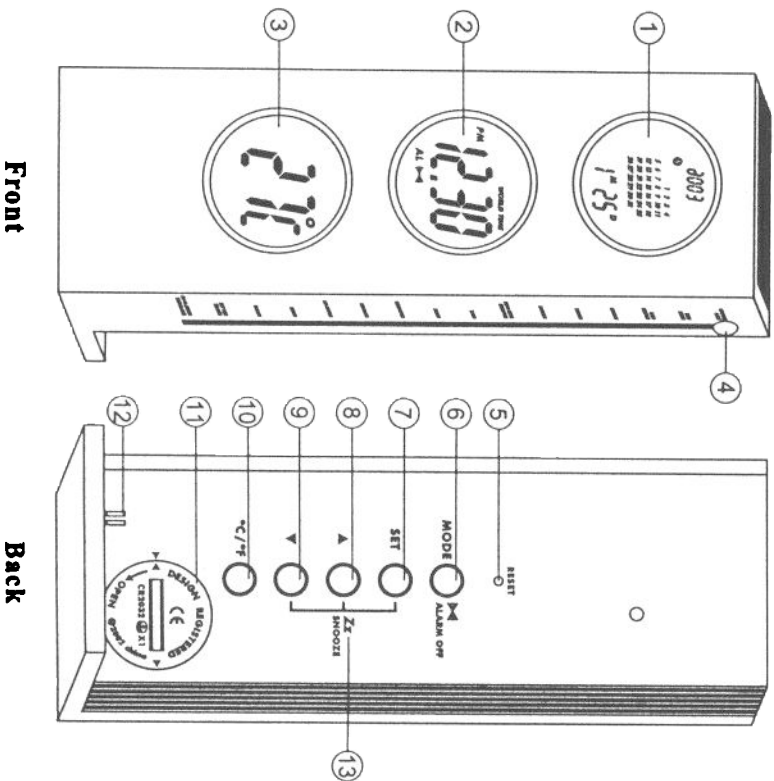

1. Calendar Display Panel
2. Clock Display Panel
3. Thermometer Display Panel
4. World Time Select Slide Switch
5. Reset Hole
6. Mode/Alarm Off Button
7. Set Button
8. Up Button
9. Down Button
10. °C/°F Select Button
11. Battery Compartment (1 x CR2032)
12. Thermometer Sensor Hole
13. Snooze Button (press "Set", "▲" or "▼" button)

### FUNCTION OF LCD WEATHER STATION

1. Time function - 12/24 hours format
2. Calendar function - from 1900 to 2099 year
3. Alarm and Snooze function
4. Temperature auto detects within range -10°C to +60°C and choice of Celsius or Fahrenheit available.

### NORMAL TIME READING

Hour, Minutes, Month, Year, Date and Temperature  
Press "MODE" button (6) to show Alarm Time

### PERPETUAL CALENDAR

Press the "▲" (8) or "▼" button (9) in Normal Time mode, the LCD will flash with the last 2 digit of the current year and the month. Press the "▲" (8) or "▼" button (9) to check the previous or coming months. Press the "MODE/ALARM OFF" button (6) will return to Normal Time mode.

### TIME SETTING

In Normal Time mode, press "SET" button (7), the Hour of the LCD will flash. The adjustment setting sequence will start from Hour → Minute → Year → Month → Date → 12/24 Hour format. Press the "▲" (8) or "▼" button (9) to go up and down of the numbers and press "SET" button (7) to confirm each setting.



PGINS00272

**ALARM TIME SETTING**

In Normal Time mode, press "MODE/ALARM OFF" button (6) once to enter the "ALARM MODE" (The icon "AL" will appear on display). Press "SET" button (7), the hour of the LCD will flash. The setting sequence will start from Hour → Minute. Press the "▲" (8) or "▼" button (9) to go up and down of the numbers and press "SET" button (7) to confirm each setting.

**ALARM ON/OFF AND HOURLY CHIME SETTING**

In Alarm Mode, press the "▲" (8) or "▼" button (9) to set "ALARM ON/OFF" or "HOURLY CHIME" (The icon "H-C" display indicates the alarm function is enabled, the icon "H" display indicates the hourly chime function is enabled.)

*\* Press the "MODE/ALARM OFF" button (6) during the "TIME SET" or "ALARM SET" procedure will return to normal time mode.*

**ALARM SOUND OFF**

Press the "MODE/ALARM OFF" button (6) to stop alarm sound immediately or leave it on for one minute and the alarm sound will stop automatically, and at the same time the snooze function is activated (The icon "Zz" will appear on display).

**SNOOZE SETTING**

When the alarm sounds, press "SNOOZE Zz" button (13) to stop the alarm sound and the icon "Zz" will appear on display. When snooze ON, the sound will last for minute for every 5 minutes, this goes on for an hour. Press the "MODE/ALARM OFF" button (6) to stop the snooze function.

**HOME TIME / WORLD TIME SETTING**

This clock pre-sets time of 16 cities, push the Slide Switch (4) to a city or city of the same time zone where you are at (The icon "WORLD TIME" will appear on display). Press "SET" button (7) to confirm the time of selected city as home time (The icon "HOME TIME" will appear on display). You have set the home time, push the sliding switch will give you timing of all other world cities.

**CELSIUS / FAHRENHEIT FORMAT**  
 Press "°C/°F" button (10) to change the temperature format between Celsius and Fahrenheit.

**CHANGE THE BATTERY**

Open the battery door, replace 1pc of new CR2032 with correct pole position. Close the cover then set time.

*\* The Reset hole (5) at the back of the clock allows the user to reset the clock. Press the hole with a needle or sharp pencil when the device is not working properly due to electrostatic discharge disturbance or after battery changed, the unit will reset automatically.*

Time difference with G.M.T	City
0	LONDON / G.M.T.
+1	PARIS / ROME / BERLIN / HAMBURG / FRANKFURT / BARCELONA / AMSTERDAM
+2	CAIRO / HELSINKI / JOHANNESBURG
+3	MOSCOW / RIVADH
+5	KARACHI
+7	BANGKOK / JAKARTA / HANOI
+8	HONG KONG / SINGAPORE / TAIPEI / BEIJING
+9	TOKYO / OSAKA / SEOUL
+10	SYDNEY
+12	WELLINGTON
-10	HONOLULU
-8	LOS ANGELES
-7	DENVER
-6	CHICAGO / MEXICO CITY
-5	NEW YORK / TORONTO
-3	RIO DE JANEIRO / BUENOS AIRES