 
 
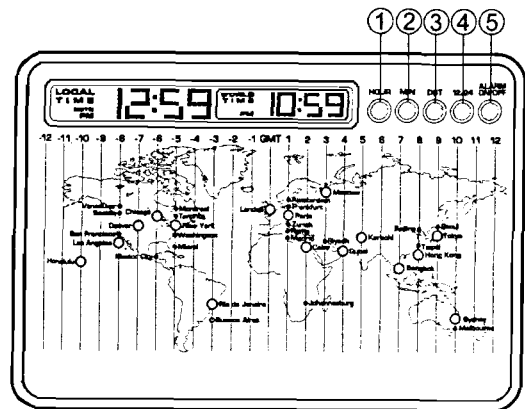 


Item # 63898

## "DOMAIN" WORLD TIME ALARM CLOCK WITH METAL PIN

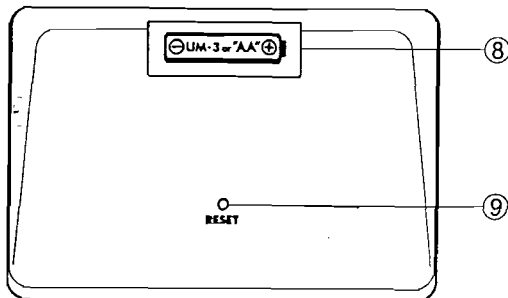

METAL PIN FOR WORLD TIME ZONE SELECTION

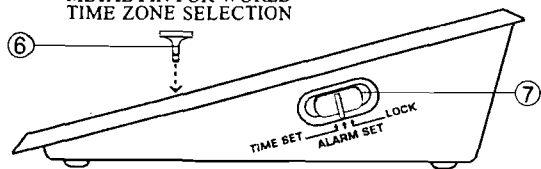

1. HOUR Key
2. MINUTE Key
3. DST (Daylight saving time) Key
4. 12/24 HOURS Select Key
5. ALARM ON/OFF Key
6. Metal Pin
7. MODE Switch (For TIME SET/ALARM SET)
8. BATTERY COMPARTMENT
9. RESET Key

### FEATURE

- Time function with 12/24 hours format.
- Dual time displaying local time and one of the time zones.

### NORMAL TIME READING

- Local time, World time in Hour and Minute.

### TO START FUNCTION

Open the battery compartment door and insert 1 new pc of AA / UM3 battery in correct polarity. Close the door and start the time setting.

### LOCAL TIME SETTING

Insert the metal pin to the hole, which designates the local time zone. Slide the "MODE" switch to "TIME SET", the Local time and World time will start to blink simultaneously. Press "HOUR" key for setting the hour and "MINUTE" key for setting the minute. After setting the time, slide the switch to "LOCK" position.

### ALARM TIME SETTING

Slide the "MODE" switch to "ALARM SET", the "FL" icon and Alarm time will start to blink simultaneously. Press "HOUR" key for setting the hour and "MINUTE" key for the minute. After setting the alarm time, slide the switch to "LOCK" position.

### ALARM ON/OFF SETTING

Press the "ALARM ON/OFF" key to turn ON/OFF the Alarm. The "ALON" icon on the display indicates the alarm function is enabled.

### ALARM SOUND OFF

While the alarm is activated, press "ALARM ON/OFF" key to stop the alarm sound immediately or leave it on 2 minutes for automatic off.

### 12/24 HOURS FORMAT

Press "12/24" key to change the 12/24 hours display format.

### DST (DAYLIGHT SAVING TIME) SETTING

Press the "DST" key to toggle ON/OFF of Daylight saving time where applicable.

DSTN - daylight saving time in Northern Hemisphere.  
DSTS - daylight saving time in Southern Hemisphere.

### WORLD TIME SELECTOR

Insert the metal pin to the hole near the desired city display the time in the desired time zone.

### CHANGE THE BATTERY

Replace the battery if the display is too dim to see. Open the battery door, replace the used battery with 1 pc of UM3 (AA) size battery in correct polarity.

The Reset hole at the bottom of the unit allows the user to reset the clock. Press the hole with a needle or sharp pencil when the device is not working properly due to electrostatic discharge disturbance or after battery changed, the unit will reset automatically.

Time difference with G.M.T	City
0	LONDON / G.M.T
+1	AMSTERDAM / FRANKFURT / ZURICH MADRID / PARIS / ROME
+2	CAIRO / JOHANNESBURG
+3	MOSCOW / RIYADH
+4	DUBAI
+5	KARACHI
+7	BANGKOK
+8	BEIJING / TAIPEI / HONG KONG / PERTH
+9	TOKYO / SEOUL
+10	SYDNEY / MELBOURNE
-3	RIO DE JANEIRO / BUENOS AIRES
-5	WASHINGTON / NEW YORK / MIAMI / TORONTO / MONTREAL
-6	CHICAGO / MEXICO CITY
-7	DENVER
-8	LOS ANGELES / SAN FRANCISCO / SEATTLE / VANCOUVER
-10	HONOLULU

