

**Operation Instructions for
Chass Item #68311, #68312, #68313**

The clock fit-up comes with a tiny clip on the time setting stem to save the battery life while not in use.

To activate the clock and/or set the time:

- Use the enclosed suction cup to remove the clock fit-up from the case.
- Gently remove the battery stopper clip from the time setting stem.
- Set the time by turning the stem in either direction to the desired time.
- Push the stem in to start the clock running, (second hand will start moving showing the clock is working).
- Replace the clock fit-up back into the case.

Battery:

- This clock uses a type “377 button cell battery”. For best operation, the battery should be changed once a year, or when the timekeeping slows or stops.
- To prevent damage to the clock movement we recommend that the battery be replaced by a watch repair professional.

**Operation Instructions for
Chass Item #68311, #68312, #68313**

The clock fit-up comes with a tiny clip on the time setting stem to save the battery life while not in use.

To activate the clock and/or set the time:

- Use the enclosed suction cup to remove the clock fit-up from the case.
- Gently remove the battery stopper clip from the time setting stem.
- Set the time by turning the stem in either direction to the desired time.
- Push the stem in to start the clock running, (second hand will start moving showing the clock is working).
- Replace the clock fit-up back into the case.

Battery:

- This clock uses a type “377 button cell battery”. For best operation, the battery should be changed once a year, or when the timekeeping slows or stops.
- To prevent damage to the clock movement we recommend that the battery be replaced by a watch repair professional.

**Operation Instructions for
Chass Item #68311, #68312, #68313**

The clock fit-up comes with a tiny clip on the time setting stem to save the battery life while not in use.

To activate the clock and/or set the time:

- Use the enclosed suction cup to remove the clock fit-up from the case.
- Gently remove the battery stopper clip from the time setting stem.
- Set the time by turning the stem in either direction to the desired time.
- Push the stem in to start the clock running, (second hand will start moving showing the clock is working).
- Replace the clock fit-up back into the case.

Battery:

- This clock uses a type “377 button cell battery”. For best operation, the battery should be changed once a year, or when the timekeeping slows or stops.
- To prevent damage to the clock movement we recommend that the battery be replaced by a watch repair professional.

**Operation Instructions for
Chass Item #68311, #68312, #68313**

The clock fit-up comes with a tiny clip on the time setting stem to save the battery life while not in use.

To activate the clock and/or set the time:

- Use the enclosed suction cup to remove the clock fit-up from the case.
- Gently remove the battery stopper clip from the time setting stem.
- Set the time by turning the stem in either direction to the desired time.
- Push the stem in to start the clock running, (second hand will start moving showing the clock is working).
- Replace the clock fit-up back into the case.

Battery:

- This clock uses a type “377 button cell battery”. For best operation, the battery should be changed once a year, or when the timekeeping slows or stops.
- To prevent damage to the clock movement we recommend that the battery be replaced by a watch repair professional.