



## Chass item #77305 Instructions

"The Album" LCD Alarm Clock, Calendar, Indoor Thermometer,  
Photo Frame and Photo Album

### A) GETTING STARTED

- Open the back by gently pulling on the knob above the photo frame. The operating knobs on the back of the clock will become visible.

### B) BATTERIES

- The clock operates on 2 AA (or UM-3) type batteries, which are included. Remove the insulating tag from the battery compartment, being certain the polarities (+, -) are as shown, in the battery compartment. When the tags are removed, the clock will play a melody, which means that the clock is activated.
- When the display begins to fade or alarm volume weakens, it is time to replace the batteries.

### C) SETTING THE CLOCK

- In "TIME" mode, press "SET" button once and the "HOUR" will start to flash, press "▲" or "▼" button to set the desired hour.
- Press "SET" button again to move to the next setting, press "▲" or "▼" button for the desired setting.
- The setting sequence is:  
"HOUR" → "MINUTE" → "YEAR" → "MONTH" → "DATE"
- When you have finished the time setting, press "TIME/ALM" button or wait for 1 minute to lock the time, the display will stop blinking.


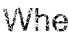 
### D) TO SELECT 12/24 HOUR DISPLAY

- In "TIME" mode, press the "▲" button and the display will change automatically between the AM/FM or the 24 hour clock time display.

### E) USING THERMOMETER

- Press the "°C/°F" button and the thermometer will change automatically between the Celsius or Fahrenheit temperature display.


### F) SETTING THE ALARM

- Press "TIME/ALM" button to enter "Alarm Time" mode, the  icon will appear on the display.
- Press "SET" button once and the "HOUR" will start to flash.
- Press the "▲" button or the "▼" button to set the desired alarm hour.
- Press "SET" button again to move to the minute setting and the "MINUTE" will start to flash. Press the "▲" button or the "▼" button to set alarm minute.
- When you have finished the alarm time setting, press "TIME/ALM" button twice or wait for 1 minute to return to normal time mode.
- Press "▼" button to select alarm on or alarm off.
- When "Alarm On" is selected, the  icon will appear on the display. When the alarm time is reached, the alarm will sound continuously for 1 minute, if not stopped manually. To turn off the alarm, press any button on the back control panel. Please note that the alarm function features "Snooze" and "Melody Sound Selection", as described below.

### G) SETTING SNOOZE

- When the clock is sounding, press "SNZ" button for "Snooze" function, the alarm sound will stop immediately and will start again 4 minutes later. The "zZ" icon will appear in the display.

### H) CHANGING ALARM MELODY

- This clock contains 8 alarm melodies and one regular "Bi-Bi" alarm sound.
- Press "TIME/ALM" button to enter Alarm Time mode, the  icon will appear on the display.
- Press the "▲" button to select desired alarm melody or "Bi-Bi" alarm sound.

### I) TO CLEAN

- Use a soft cloth, do not use any chemicals or soap on the wood or the brass.

Note: If the clock is locked and not working, use a pin to press the "RESET" hole on the rear of the clock movement