


CHASS Item# 20216

HANDY METAL LCD TRAVEL ALARM CLOCK

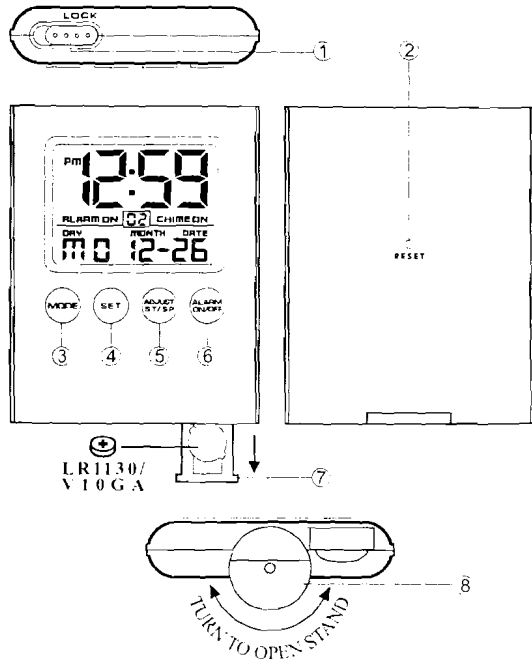

- | | |
|--------------|-------------------------|
| 1. LOCK Key | 5. ADJUST ST/SP Key |
| 2. RESET Key | 6. ALARM ON/OFF Key |
| 3. MODE Key | 7. Battery Compartment |
| 4. SET Key | 8. Turnable Table Stand |

FEATURES


- Time function - 12/24 hours format
- Alarm function
- Calendar function
- Timer
- Stopwatch



X-PGINSL D65-00002
(EN FR GE DE SP)

NORMAL TIME READING

- Hour, Minutes, Second, Month, Date and Weekday
- Press "MODE" key to change the following MODES

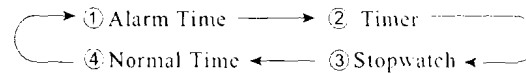

TO START THE CLOCK

Gently remove the insulating slip at the bottom of the clock, and slide the "LOCK" key to UNLOCK position to start time setting.

TIME SETTING

In Normal Time Mode, depress "SET" key then the digits for seconds will start to blink simultaneously. Press "ADJUST ST SP" key once to set the seconds to zero. The setting sequence will start from Minute → Hour → Month → Date → Day. Press "MODE" key to select the setting mode. Press "ADJUST ST/SP" key to advance and "SET" key to confirm the setting.

ALARM TIME SETTING

• Schedule Alarm Time Setting

In Alarm Time Mode ("AL") will be shown on display), depress "SET" key then the digits for minute will start to blink simultaneously. The setting sequence will start from Minute → Hour → Month → Date. Press "MODE" key to select the setting mode. Press "ADJUST ST/SP" key to advance and press "SET" key to confirm the setting.

• Daily Alarm Setting

In Schedule Alarm Time Setting, select the "Month" and "Date" to "♦♦" status for daily alarm setting.

TIMER

In Timer Mode ("T P") will be shown on display), depress the "SET" key then the digits for seconds will start to blink simultaneously. The setting sequence will start from Second → Minute → Hour. Press "MODE" key to select the setting mode. Press "ADJUST ST/SP" key to advance and press "SET" key to confirm the setting. Operate the Timer by pressing "ADJUST ST/SP" key to start or stop. By pressing "ALARM ON/OFF" key to return to original pre-set time. When the count down buzzer is ON, press any key to stop the sound immediately or leave it on for 30 seconds, the sound will stop automatically.

STOPWATCH

In Stopwatch Mode ("ST" will be shown on display), operate the Stopwatch by pressing "ADJUST ST SP" key to start and stop, by pressing "ALARM ON OFF" key to reset to Zero (When Stopwatch is stopped). Operate the lap time by pressing "ADJUST ST SP" key to start, by pressing "ALARM ON OFF" key to measure lap ("I" and "II" will start to blink simultaneously. "SP" will be shown on display), by pressing "ADJUST ST/SP" key to stop at the end of the event, by pressing "ALARM ON OFF" key to display the accumulated lap time, by pressing "ALARM ON OFF" key again to reset zero (When Stopwatch is stopped).

ALARM AND HOURLY CHIME

In Normal Time Mode, press "ALARM ON OFF" key to toggle the Alarm or Hourly Chime ON OFF. Icon "ALARM ON" display indicates the alarm function is enabled. Icon "CHIME ON" display indicates the Hourly Chime is enabled.

ALARM SOUND OFF

Press "ALARM ON/OFF" key to stop alarm sound immediately or the alarm sound will stop automatically after 30 seconds, to save the battery consumption.

12/24 HOURS FORMAT

In Normal Time Mode, press "Adjust ST/SP" key to select 12/24 Hours format.

LOCK KEY

Slide the "LOCK" key to LOCK position, when the clock is not in use, to avoid any deflection on the setting.

CHANGE THE BATTERY

Replace the batteries if the display is too dim to see. Slide out the battery compartment and replace with a new 1.5V button cells battery (LR1130 / V10GA) in correct polarity.

The reset hole at the back of the clock allows the user to reset the clock. Press the hole with a needle or sharp pencil when the device is not working properly due to electrostatic discharge disturbance or after battery changed, the unit will reset automatically.